


---

# Operation Manual

## VT50 Series

### UHF, L, S, C-Band

### Video / Audio Transmitters

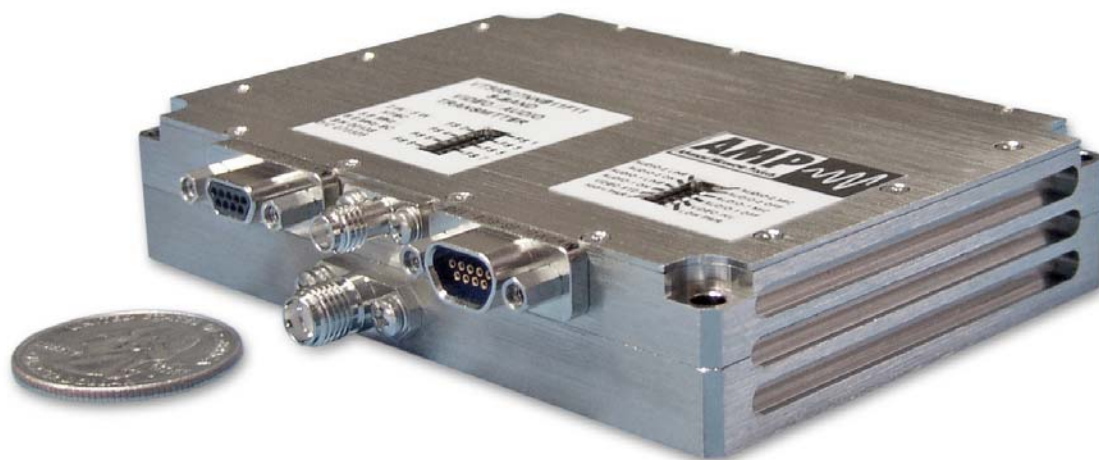

Designed and Manufactured By



7025 Longley Lane, Suite 20  
Reno, NV 89511

Distributed By



107 Woodbine Down Blvd, Units 7&8  
Toronto, ON M9W 6Y1

---

## TABLE OF CONTENTS

1.0	Introduction.....	1
1.1	Purpose and Function.....	1
1.2	Capabilities.....	1
1.3	Specifications.....	2
1.4	Mechanical Drawing and Connector Pin-Outs.....	4
1.5	List of Items Furnished.....	5
1.6	List of Items Required.....	5
1.7	Environmental Requirements.....	5
2.0	Safety Precautions.....	5
3.0	Preparation for Use.....	6
3.1	Unpacking.....	6
3.2	Pre-Test.....	7
4.0	Installation and Operating Instructions.....	7
4.1	Use and Function of Connectors.....	7
4.2	Use and Function of Switches.....	8
4.2.1	Frequency Selection Switches.....	8
4.2.2	Power Level Switch.....	8
4.2.3	Video Inversion Switch.....	9
4.2.4	Audio On/Off Switch(es).....	9
4.2.5	Line / Mic Audio Level Switch(es).....	9
4.3	Use of Heat Sink.....	10
4.4	Initial Adjustments and Settings.....	10
4.5	Shut Down.....	10
5.0	Maintenance Instructions.....	10
5.1	Cleaning.....	10
5.2	Troubleshooting.....	11
5.3	Preparation for Reshipment.....	11
5.4	Returning an Item.....	11
	Warranty Statement.....	12
	Appendix A (Calculation of Safe Personal Distance from Antenna).....	13

---

## 1.0 INTRODUCTION

Thank you for choosing this AMP Wireless Video Product. Every effort has been made to design and manufacture a quality product that will meet your surveillance needs for many years. Please visit our website ([www.advmw.com/video](http://www.advmw.com/video)) for information on other video products and for downloadable datasheets, operation manuals, model number builders, and frequency selection charts.

If you have any questions regarding this product or if you require technical assistance, please feel free to contact us at the telephone numbers below:

Dyplex Communications  
(416) 675-2002

Advanced Microwave Products  
(775) 345-9933

### 1.1 Purpose and Function

VT50 Series Video/Audio Transmitters are developed and manufactured by Advanced Microwave Products (AMP) and distributed by Dyplex Communications (Dyplex).

Transmitters are designed for color or monochrome video and audio surveillance. Transmitters are best operated with AMP's VR75 Series Video Receivers but are compatible with most other video receivers on the market.

### 1.2 Capabilities

AMP Transmitters are designed for harsh environments and feature robust packaging and connectors. Compact package sizes provide versatility in unit placement and system applications.

AMP Transmitters require no tuning or adjustments. All units operate directly with any standard video camera. Power requirements are +9 to +16 Vdc and can be derived from batteries, simple power supplies, or vehicle power.

Whip or "rubber duck" antennas are adequate for most transmitter applications. A variety of standard and high performance antennas are available through Dyplex.

AMP Transmitters and Receivers are standard equipped with video inversion, selectable via a slide switch, for a basic level of security.

VT50 Series Transmitters are available with many options allowing customization to specific applications. Most common options include frequency selection (full band selection), high RF output power, selectable output power (2 W / 5 W for L/S/C-bands, 2 W / 5 W / 10 W for UHF), PAL video, and up to two audio subcarriers with up to 100 kHz bandwidth.

If our standard products and options do not satisfy your requirements, please contact us. Our experienced design team welcomes your custom specifications.

### 1.3 Specifications

#### RF Characteristics

---

Frequency Range (Specify):	UHF	340.00 - 399.90 MHz	100 kHz Channels
(Other Ranges Available)	L-Band	1710.00 – 1850.00 MHz	250 kHz Channels
	S-Band	2450.00 - 2483.50 MHz	250 kHz Channels
	C-Band	4400.00 – 4999.75 MHz	250 kHz Channels
Frequency Selection (Specify):	Fixed or Channelized, Full Band, Slide Switch Selectable		
Frequency Stability:	±0.002% Over -20°C to +50°C		
Output Power (Specify):	UHF	2 W, 5 W, 10 W, or 2/5/10 W Selectable (Slide Switch)	
	L/S/C	2 W, 5 W, or 2/5 W Selectable (Slide Switch)	
Output Impedance:	50 _ Nominal, VSWR 1.5:1 Maximum		
Output Protection:	UHF	Power Fold Back – Open/Short Indefinitely	
	L/S/C	Internal Isolator - Open/Short Indefinitely	
Spurious Output:	-13 dBm Maximum		

#### Video Characteristics

---

Modulation Type:	Analog FM		
Modulation Sense:	Standard (Positive) or Inverted (Negative), Slide Switch Selectable		
Frequency Response (Specify):	10 Hz to 3.5 MHz (Monochrome), 4.5 MHz (NTSC), or 5.5 MHz (PAL), ±1.5 dB		
Pre-Emphasis (Specify):	525-Line (NTSC), 625-Line (PAL), or None		
Modulation Sensitivity:	±4 MHz / 1 Vpk-pk @ Crossover Frequency		
Input Impedance:	75 _ Nominal, Unbalanced, Shunted by 30 pF Maximum		
Distortion:	2% Maximum		
Incidental FM:	10 kHz Maximum		

#### Audio Characteristics

---

Subcarriers (Specify):	None, One, or Two		
Subcarrier Frequency (Specify):	4.83, 5.8, 6.0, 6.2, 6.5, 6.8, 7.2, 7.5, 8.3, 8.5, or 8.59 MHz, or Custom		
Subcarrier Separation (Two):	700 kHz Minimum		
Frequency Stability:	±0.5% Over -20°C to +50°C		
Subcarrier Insertion Level:	-26 dBc Nominal		
Subcarrier On/Off Control:	Slide Switch Selectable		
Modulation Type:	Analog FM, Positive Sense		
Frequency Response (Specify):	20 Hz to 10 kHz (Audio) or 100 kHz (Data), ±1.5 dB		
Pre-Emphasis (Specify):	75 µsec (NTSC) or 50 µsec (PAL)		
Modulation Sensitivity:	100 kHz pk-pk @ 1 kHz rate, Mic (-70 to -20 dBm) or Line (-10 dBV)		
Input Impedance:	4.7 k_ Minimum, Unbalanced		
Input Level:	Line or Mic, Slide Switch Selectable		
Mic Supply Output (Specify):	1.5 Vdc, 3.3 Vdc, or 5.0 Vdc		

---

### Power Requirements

---

Input Voltage Range:	UHF	+11 to +14 Vdc, Reverse Polarity Protected
	L/S/C-Band	+9 to +16 Vdc, Revers Polarity Protected
DC Input Current (Maximum):	UHF	600 mA (2 W RF), 1.4 A (5 W RF), 2.5 A (10 W RF)
	L/S-Band	600 mA (2 W RF), 1.4 A (5 W RF)
	C-Band	750 mA (2 W RF), 1.6 A (5 W RF)
On/Off Control:	Open = Off, Ground = On	

### Mechanical

---


Material:	CNC Machined T6061-T6 Nickel Plated Aluminum		
Dimensions:	2.50" W x 3.50" L x 0.70" H		
Weight:	8 oz. Maximum		
Connectors:	RF Output:	SMA Female	
	Video Input:	SSMA Female	(Others Available)
	DC Supply, On/Off:	MDM-9P	
	Audio/Mic Supply:	MDM-9S	(If Applicable)

### Environmental

---

Temperature (Operating):	-20°C to +50°C
Humidity:	Up to 95% @ Any Temperature Forming Frost or Condensation

## 1.4 Mechanical Drawing and Connector Pin-Outs

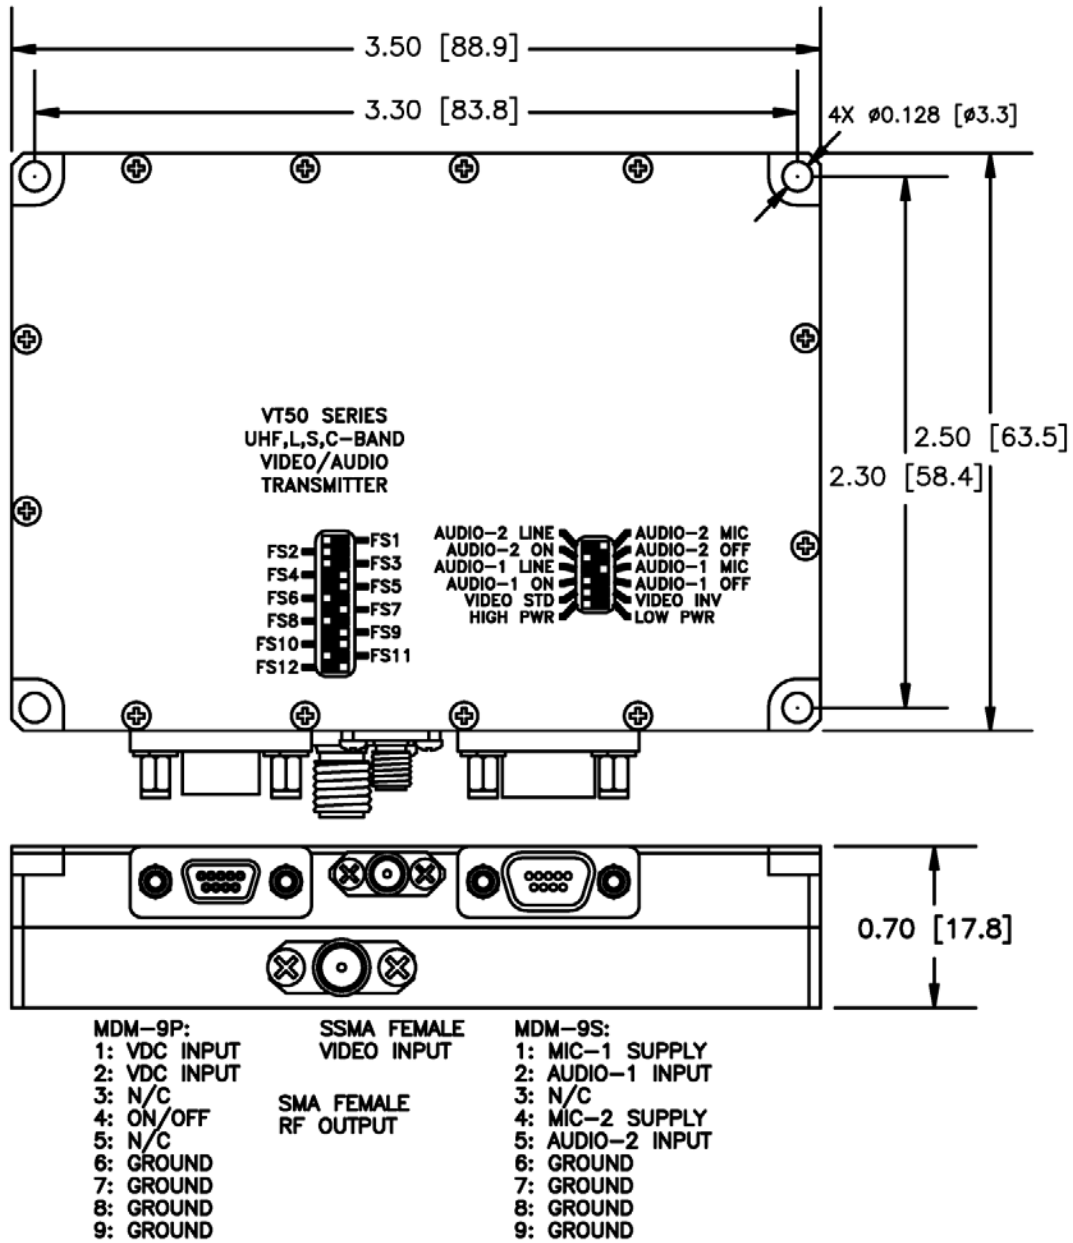

---

### 1.5 List of Items Furnished

1-Transmitter

1-Type SSMA Plug (Male, SMB Optional) to BNC Jack (Female) Video Adapter Cable

1-Type BNC Plug (Male) to BNC Plug (Male) Video Cable

1-Type MDM-9S (Socket) DC Power Cable

1-Type MDM-9P (Pin) Audio Cable

1-Heatsink (if purchased)

### 1.6 List of Items Required

Antenna, Type SMA Plug (Male) Connector

Camera, Type BNC Jack (Female) Connector

Video connector adapter to BNC, if camera does not have BNC connector

Microphone(s) (if audio subcarrier(s) specified)

### 1.7 Environmental Requirements

AMP Transmitters are designed for indoor or outdoor use. Precautions should be taken when exposing transmitters to the elements. Do not expose to 100% humidity.

Transmitters should be located in areas where the ambient temperature does not exceed the maximum operating temperature indicated in the specifications (Section 1.4).

Placement in confined locations with minimal air flow, in direct sunlight in areas of temperature extremes, or in proximity to other devices which generate heat, such as power supplies, heating systems, etc., should be avoided. Temperatures exceeding +75°C may cause permanent damage to the equipment.

When not used for extended periods of time external connections, including power cable, video cable, and antenna, should be removed and the units covered, boxed, or crated and stored in a clean, dry place. See Section 1.7 above for environmental requirements.

## **2.0 SAFETY PRECAUTIONS**

Transmitters should be handled with caution like any electrical or electronic device. Do not handle the units or associated cabling with wet hands or materials.

Connections should be made only to previously-tested, active power sources (outlets or batteries) of the correct voltage, and each connector should be inserted only into its designated port. All connections should be checked to ensure they are firmly in place.

### **WARNING! RF RADIATION HAZARD**

**In order to keep the RF Exposure within the FCC 1.1310 limit, a safe personal distance from the antenna must be maintained according to the below tables. The first table is for transmitters operating 1500 MHz or higher where the Maximum Permissible Exposure (MPE) is 10 Watts/meter<sup>2</sup>. The second table is for transmitters operating in the 340-400 MHz range where the MPE is 2.27 Watts/meter<sup>2</sup>. See Appendix A for details on calculation of safe personal distances.**

<b>Operating Frequency 1500 MHz and Higher (MPE = 10 W/m<sup>2</sup>)</b>				
Antenna Gain (dBi)	Transmitter Power = 2 Watts		Transmitter Power = 5 Watts	
	EIRP (Watts)	Minimum Distance (Meters)	EIRP (Watts)	Minimum Distance (Meters)
0	2.0	>0.20	5.0	>0.20
2	3.2	>0.20	7.9	0.25
5	6.3	0.22	15.8	0.35
10	20.0	0.40	50.0	0.63
15	63.2	0.71	158.1	1.12
20	200.0	1.26	500.0	1.99
25	632.5	2.24	1581.1	3.55
30	2000.0	3.99	5000.0	6.31

<b>Operating Frequency 340 - 400 MHz (MPE = 2.27 W/m<sup>2</sup>)</b>						
Antenna Gain (dBi)	Transmitter Power 2 Watts		Transmitter Power 5 Watts		Transmitter Power 10 Watts	
	EIRP (Watts)	Minimum Distance (Meters)	EIRP (Watts)	Minimum Distance (Meters)	EIRP (Watts)	Minimum Distance (Meters)
0	2.0	0.26	5.0	0.42	10.0	0.59
2	3.2	0.33	7.9	0.53	15.8	0.75
5	6.3	0.47	15.8	0.74	31.6	1.05
10	20.0	0.84	50.0	1.32	100.0	1.87
15	63.2	1.49	158.1	2.35	316.2	3.33
20	200.0	2.65	500.0	4.19	1000.0	5.92
25	632.5	4.71	1581.1	7.45	3162.3	10.53
30	2000.0	8.37	5000.0	13.24	10000.0	18.72

**MAINTAIN A SAFE PERSONAL DISTANCE FROM THE ANTENNA WHILE TRANSMITTER IS OPERATIONAL.**

**FAILURE TO MAINTAIN A SAFE PERSONAL DISTANCE FROM THE ANTENNA MAY RESULT IN PERSONAL INJURY.**

### **3.0 PREPARATION FOR USE**

#### **3.1 Unpacking**

Carefully remove the transmitter from the shipping container and make sure all listed furnished items are included (Section 1.5). Inspect all items for damage. If any item is omitted from the shipment or appears damaged, contact Dyplex or AMP with detailed description of problem.

---

### 3.2 Pre-Test

Although each unit is thoroughly tested at the factory for both functional and environmental performance, a minimal amount of pre-testing should be done by the operator before placing the transmitter into service. The transmitter, an appropriate AMP receiver, transmit and receive antennas, a video camera, a video monitor, and DC power supplies are the only components required to perform a functional test of the transmitter. If testing audio, a microphone and a speaker or headphones will also be required.

The transmit and receive antennas should be situated at a distance of greater than 50 feet apart to prevent serious damage to or destruction of the receiver's front end. Set up the receiver and make all necessary adjustments in accordance with that unit's Operation Manual. Connect the receiver video output to the video monitor and, if testing audio, connect the receiver audio output to the speaker or headphones.

If using remote control, connect remote control to the On/Off Control line (white wire in DC Power Cable). If not using remote control, connect the On/Off Control line to power or chassis ground.

Verify DC power supplies are between +9 and +16 Vdc. With the DC Power Cable (MDM-9S connector) DISCONNECTED from the transmitter, connect DC power supply to DC Power Cable (red = positive DC input, black = negative DC input (ground)). Do not connect DC Power Cable to transmitter until all other connections are complete.

Connect the transmit antenna to transmitter RF output connector (SMA). Connect the Video Adapter Cable to the transmitter video input connector (SSMA, SMB optional). Connect the Video Cable between the Video Adapter Cable and video camera. If testing audio, connect the microphone to the Audio Cable (MDM-9P connector) and Audio Cable to the transmitter (mates to MDM-9S connector on transmitter). Refer to Section 4.1 for Audio Cable wiring.

Configure switches as instructed in Section 4.2. Connect DC Power Cable to transmitter (mates to MDM-9P connector on transmitter). If not using remote control, video should be observed on the monitor and audio heard through the speaker / headphones (if applicable) once the transmitter locks on frequency (requires several seconds). If using remote control, the On/Off Control line must be enabled (grounded or <0.8 Vdc) before video and audio will be present.

If no video or audio (if applicable) is present, refer to Section 5.2 for troubleshooting instructions.

## **4.0 INSTALLATION AND OPERATING INSTRUCTIONS**

### 4.1 Use and Function of Connectors

AMP Transmitters are simple to install, requiring only connection to the antenna, camera, microphone (if audio specified), and DC power supply using the appropriate cables and jacks. The use and function of the transmitter connectors are as follows:

<b>POWER CONNECTOR (MDM-9P)</b> <i>Mate: Supplied MDM-9S Power Cable</i>	Red Wire – Positive DC Input (+9 to +16 Vdc) Black Wire – Negative DC Input (Ground) White Wire – On/Off Control <i>(Ground or &lt;0.8 Vdc for On, Open for Off)</i>
<b>AUDIO CONNECTOR (MDM-9S)</b> <i>Installed only when subcarrier(s) specified</i>  <i>Mate: Supplied MDM-9P Audio Cable</i>	Red Wire – Mic 1 Supply Output Yellow Wire – Audio 1 Input (Mic or Line) Orange Wire – Mic 2 Supply Output Violet Wire – Audio 2 Input (Mic or Line) Black Wire(s) – Ground (1 per subcarrier)
<b>VIDEO CONNECTOR (SSMA)</b> <i>SMB Connector Optional</i> <i>Mate: Supplied Video Adapter Cable</i>	Standard 75 Ohm Video Input  <i>Accepts Standard 1 Vpk-pk Video Signal</i>
<b>RF OUTPUT CONNECTOR (SMA)</b>  <i>Mate: Appropriately Selected SMA Antenna</i>	Standard 50 Ohm RF Output  <i>Outputs Nominal RF Power Level to Antenna</i>

## 4.2 Use and Function of Switches

### 4.2.1 Frequency Selection Switches:

Frequency selectability is an option on all VT50 Series Transmitters providing RF frequency control with slide switches accessible through the chassis lid. S-Band units utilize 8 slide switches; UHF, L-Band, and C-Band units utilize 12 slide switches. Each switch is uniquely identified (FS1 through FS8, or FS1 through FS12) on the unit label.

To program the desired RF frequency, position the individual switches as shown in the applicable Frequency Selection Chart, included with product shipment and available as a download on the applicable Video Product Page of our website ([www.advmw.com/video](http://www.advmw.com/video)).

### 4.2.2 Power Level Switch:

UHF VT50 Series Transmitters may be ordered with nominal RF output power of 2 Watts, 5 Watts, or 10 Watts and may be optionally configured for power selection (2 W / 5 W / 10 W) via a slide switch accessible on the connector side of the transmitter. L, S, and C-band VT50 Series Transmitters may be ordered with nominal RF output power of 2 Watts or 5 Watts and may be optionally configured for dual power selection (2 Watts / 5 Watts) via a slide switch accessible through the chassis lid. Power selection switches are inactive if this option is not purchased.

To select the appropriate RF output power level, position the slide switch to HIGH PWR or LOW PWR (for L/S/C-band units) or 2W, 5W, or 10W (for UHF units) as indicated on the unit label.

---

VT50 Series Transmitters operating at 5 Watts or higher incorporate an automatic power “fold back” circuit to protect the unit in case of high VSWR loads (such as RF short, RF open, broken antenna, wrong antenna, etc.). In the event of a high VSWR load causing approximately 2.5 Watts power reflection for L/S/C-band units and 5 Watts for UHF units, the RF output power is automatically reduced to approximately 2 Watts to avoid excessive heat and potential damage to the unit. The “fold back” circuit attempts to restore the RF output power to its normal level every 1 millisecond, checking each time whether the high VSWR load has been repaired.

#### 4.2.3 Video Inversion Switch:

All AMP Transmitters and Receivers are standard equipped with video inversion, selectable with a slide switch accessible through the chassis lid. When selected, the phase of the video signal is inverted (shifted 180°) in the transmitter and re-inverted in the receiver, providing a basic level of security. If an inverted video signal is detected by a receiver not configured for inversion, the resulting picture is scrambled.

To select standard video (no inversion), position the slide switch to VIDEO STD as indicated on the unit label. To select inverted video (phase inversion), position the slide switch to VIDEO INV as indicated on the unit label.

The video inversion switch position on AMP’s Receivers must match that of the transmitter or the picture will appear scrambled. If using AMP’s Transmitters with other receivers or vice-versa, position the Video Inversion slide switch to VIDEO STD.

#### 4.2.4 Audio On/Off Switch(es):

VT50 Series Transmitters are optionally equipped with up to two audio subcarriers. Each subcarrier is individually enabled / disabled with a slide switch accessible through the chassis lid. When enabled, the audio signal applied to the audio input is transmitted. When disabled, the subcarrier signal is not produced, and no audio is transmitted.

To enable audio transmission, position the corresponding slide switch to AUDIO ON as indicated on the unit label. To disable audio transmission, position the corresponding slide switch to AUDIO OFF as indicated on the unit label.

When two subcarriers are specified, Audio On/Off switches are designated as AUDIO-1 ON / AUDIO-1 OFF and AUDIO-2 ON / AUDIO-2 OFF on the unit label.

#### 4.2.5 Line / Mic Audio Level Switch(es):

VT50 Series Transmitters with audio subcarriers accept either Line or Microphone Level audio inputs. Audio level for each subcarrier is individually controlled with a slide switch accessible through the chassis lid. When set to Line, the audio input circuitry adjusts to accept standard Line Level (-10 dBV) audio. When set to Mic, the audio input circuitry adjusts to accept typical Microphone Levels (-70 thru -20 dBm) with automatic level control (ALC).

---

To adjust the audio input to Microphone Level for either subcarrier, position the corresponding slide switch to MIC as indicated on the unit label. To adjust the audio input to Line Level for either subcarrier, position the corresponding slide switch to LINE as indicated on the unit label.

When two subcarriers are specified, Audio Level switches are designated as AUDIO-1 LINE / AUDIO-1 MIC and AUDIO-2 LINE / AUDIO-2 MIC on the unit label.

When 100 kHz subcarrier frequency response is specified on either or both subcarriers, the Audio Level switch for the corresponding subcarrier(s) is inactive and the 100 kHz data is transmitted at a constant FM deviation sensitivity (no ALC).

#### 4.3 Use of Heat Sink

All VT50 Series Transmitters except UHF 10 Watts must utilize AMP Heat Sink VH2505 (0.5" high) or be securely fastened to an adequate heat sinking object or surface. VT50U UHF 10W or 2/5/10W transmitters utilize AMP Heat Sink VH2513 ((1.3" high). VT50 transmitters should be fastened to AMP heat sinks using provided 4-40x11/16" pan head or socket head screws with #4 lock washers. Use of thermal grease, such as Wakefield Engineering 120 Series Thermal Compound, to improve thermal conduction between transmitter baseplate and heat sinking surface will reduce unit temperature and increase product reliability.

**Caution: Failure to provide adequate heat sinking VOIDS PRODUCT WARRANTY.**

#### 4.4 Initial Adjustments and Settings

There are no initial adjustments or settings necessary to use AMP Transmitters other than proper configuration of the slide switches as outlined above in Section 4.2. To assure optimum performance, the user should be familiar with the camera, monitor, microphone, and speaker/headphones used with this video/audio system.

#### 4.5 Shut Down

If the transmitter is to be shut down only briefly, simply remove DC voltage from the DC Power Cable or disconnect DC Power Cable from transmitter. If the unit is to be shut down for an extended period, all external cabling including the antenna should be removed and the unit should be stored in a container and placed in a clean, dry environment.

### **5.0 MAINTENANCE INSTRUCTIONS**

#### 5.1 Cleaning

AMP Transmitters should be periodically wiped off with a clean, damp cloth. For more thorough cleaning, dampen a clean cloth with glass cleaner and wipe off unit. Ensure units are completely disconnected from their power sources before cleaning.

---

## 5.2 Troubleshooting

To avoid poor performance, ensure all transmitter and mating connectors are tightly fastened, clean, and have no pins bent or damaged.

Verify configuration of all slide switches (refer to Section 4.2).

If poor or no operation is observed, ensure the external DC voltage supply is between +9 and +16 Vdc with correct polarity. All AMP Transmitters have over-voltage and reverse polarity protection circuits. If the input voltage is over +16 Vdc, remove the DC Power Cable from the transmitter, reduce the DC voltage to between +9 and +16 Vdc, and reconnect the DC Power Cable. If the input voltage is negative polarity, remove the DC Power Cable from the transmitter, reverse the connections between the DC voltage supply and DC Power Cable, and reconnect the DC Power Cable.

If all connections are adequate, switches are correctly configured, and DC voltage is correctly applied, check the video camera, video cable, and antenna for damage. A monitor may be connected directly to the camera to verify proper camera operation.

For audio applications, if receiving video but no audio, check connections between microphone and Audio Cable. Also check microphone and Audio Cable for damage.

If these efforts fail, **do not attempt to repair the unit.** Please contact Dyplex or AMP with a detailed description of the problem. Depending on the nature of the problem, Dyplex or AMP may provide further troubleshooting assistance or advise the entire system be returned for repair and retest.

**Caution: Removal of the cover constitutes breaking the seal and VOIDS PRODUCT WARRANTY.**

## 5.3 Preparation for Reshipment

If the transmitter and/or any other purchased item(s) are to be shipped to another location or returned for repair or realignment, use the original packaging or a sturdy box with sufficient protective material to avoid damage from movement or exposure during transit. Remove all external connections (cables, antenna, etc.) prior to shipping.

## 5.4 Returning an Item

Please contact Dyplex customer service at (416) 675-2002 for a Return Authorization Number before returning an item. The Dyplex ship-to address is listed below. When returning an item, always include a contact name and phone number and a detailed description of the problem with your shipment.

Dyplex Communications  
107 Woodbine Downs Blvd, Units 7 & 8  
Etobicoke, Ontario,  
Canada M9W 6Y1

---

## WARRANTY STATEMENT

Advanced Microwave Products (AMP) warrants these products to be free from defects in material and workmanship for a period of one year from date of original shipment. AMP shall, at its option, either repair or replace products which prove to be defective.

No products may be returned to AMP without the permission of AMP. BUYER, after obtaining a return authorization from AMP, shall return the equipment to AMP accompanied by a report stating as completely as possible the reason for return, the defects, and the conditions under which they occurred. BUYER shall pay all shipping charges, duties, and fees for the return of products to AMP. All warranty services will be carried out at AMP's facility. AMP will pay for the return of products to the BUYER.

All articles are to be properly and carefully inspected by BUYER upon receipt. Shipping container damage may indicate equipment damage. All shipping damage must be promptly reported to the carrier. AMP is not liable for shipping damage.

Limitation of Warranty: The above warranty does not apply to defects of, or resulting from the following:

- 1) End items included as part of a system, but not designed by, AMP are subject only to warranty as may be obtained from the original manufacturers. Such items include, but are not limited to, batteries, cameras, monitors, cabling, etc.,
- 2) Operation outside of the environmental specifications of the product,
- 3) Unauthorized modifications, misuse, or mishandling,
- 4) Improper or inadequate maintenance by BUYER,
- 5) Improper or inadequate heat sinking by BUYER
- 6) Improper installation or improper testing,
- 7) Malfunction of connected hardware.

THIS WARRANTY IS EXCLUSIVE AND NO OTHER WARRANTY, WHETHER WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED. AMP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

The remedies set forth above are the purchaser's sole and exclusive remedies. In no circumstances shall AMP assume liability for loss, damage, or consequential expense (including loss of profits) whether based on contract, tort, or any other legal theory, arising directly or indirectly from the use of its equipment separately or in combination with other equipment.

## APPENDIX A

### Calculation of Safe Personal Distance From Antenna

The Maximum Permissible Exposure (MPE) limit according to FCC 1.1310 is as follows:

Frequency	Limit
30-1500 MHz	$F/150 \text{ W/m}^2$ (where F is frequency in MHz)
1500 MHz – 100 GHz	$10 \text{ W/m}^2$

For VT50 Upper L-band, S-band, and C-band transmitters (all greater than 1500 MHz), the MPE is  $10 \text{ W/m}^2$ .

For VT50 Lower L-band transmitters, the operating frequency range is 1300-1600 MHz resulting in a MPE of  $8.67 \text{ W/m}^2$  (the lowest MPE in the 1300-1600 MHz range occurs at 1300 MHz and is  $1300/150 \text{ W/m}^2$ ).

For VT50 UHF transmitters, the operating frequency range is 340-400 MHz resulting in a MPE of  $2.27 \text{ W/m}^2$  (the lowest MPE in the 340-400 MHz range occurs at 340 MHz and is  $340/150 \text{ W/m}^2$ ).

Using the formula for the Power Density  $S = \text{EIRP} / 4\pi D^2$ , the distance D, where the Maximum Permissible Exposure (MPE) satisfies the FCC 1.1310 limit ( $S = \text{MPE}$ ) for General Population/Uncontrolled Exposure, can be calculated as:

$$D \geq \sqrt{(\text{EIRP} / 4\pi S)} \quad (\text{meters})$$

where S is the MPE and EIRP is the Effective Isotropic Radiated Power, calculated as:

$$\text{EIRP} = 10^{(G/10)} P \quad (\text{Watts})$$

where G is the logarithmic antenna gain in dBi and P is the transmitter power in Watts. The resulting safe personal distance calculation is:

$$D \geq \sqrt{(10^{(G/10)} P / 4\pi S)} \quad (\text{meters}).$$